

## Using the Crestron Audio-Visual Control System

If touch screen is blank, touch center of screen to wake from Sleep Mode.

Press **“Start”** to begin using the audio/visual system.




Follow directions as they appear on the touch screen.



First, press **“Project”** to start audio-visual system.

Allow 30-45 seconds for video projector to warm up.

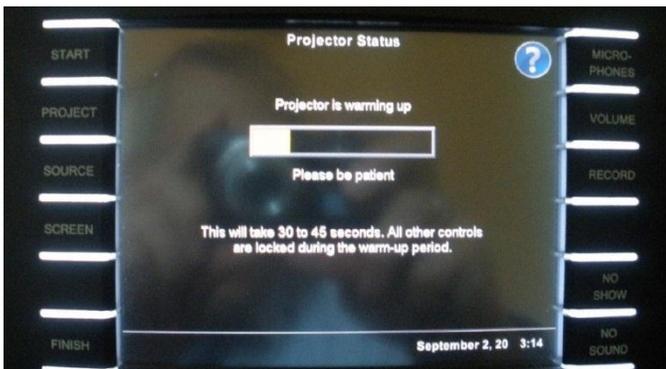

Use the **Wall Switch** to lower and raise the projection screen. (This function will be added to the Crestron touch panel at a later time.)

Next, press **“Source”** to choose your display.



- **Computer** will display the PC in the podium.
- **Laptop** allows you to connect a laptop computer in the Auxiliary box located on top of the podium.
- **Document Camera** is located in the side drawer of the podium. Use controls on the Document Camera to Zoom and Focus.
- **DVD-VCR Combo** – Press **“Controls”** to display player controls for DVD or VCR.

Press **“Volume”** to adjust Master Volume.

Press **“No Show”** once to hide the display on the projection screen. Press again to show the display.

When you are done with your class or presentation, press **“Finish”** to shut down the audio-visual system.

- Press **“Yes”** to confirm you are finished using the audio-visual system.